

BANNER PRINTING KYOCERA TASKALFA DEVICES

- When designing your banner you will need to ensure that your page size is set to the banner size you wish to print. Max: 297 x 1200mm
- When printing you will then need to select - printer properties
- On the basic tab select Print Size
- Select Custom
- New - enter height and width of your publication/banner
- Call this size banner
- Select apply, then OK
- In print size drop down menu select Banner
- Source - select MP Tray
- Ok
- Print

