

A hand is shown holding a white card with a red logo over a grey Kyocera device's card reader. The device has a control panel with a screen and buttons. The background is a blurred office setting.

Associating Card with Windows Login

- Hold your card to the reader on the Kyocera Device
- You will then have a screen show on the device panel asking for Username and Password. Please enter the credentials you use to log into your computer with. Do this by pressing the empty boxes and a screen will appear with a keyboard layout.
- Once you have entered your credentials press the set button.
- Now when you go to the machine you can login simply by swiping your card in front of the reader.